

## SWDK Electric Mop



### Instructions

**Before use, read the instructions carefully**

### Using the device

Thank you for choosing SWDK Electric Mop!  
Uniform wet cleaning of the entire apartment, fan-shaped spraying with water dust, the mechanism of reciprocating movements of the mop, convenient and high-quality cleaning of ceramic tiles, marble, parquet and other surfaces.  
Use a special clean cloth or waxed head for polishing the floor surface. Easy and highly effective house cleaning.  
SWDK Electric Mop is designed to facilitate your daily life. Pleasant use!

## Safety Information


### Using

- Before use it is necessary to remove debris from the floor surface, this device does not sweep and does not draw dust;
- This device is not water resistant, it is forbidden to wet it, use it for surfaces on which there is a sticky liquid or a large amount of water;
- When cleaning a small room, various objects may interfere with the normal operation of the device, possibly jamming. If this situation occurs, turn off the device using the on/off button on the handle, then move the device to a different location;
- It is strictly forbidden to increase the load on the main device;
- Children are not allowed to play and stand on this device;
- Clean the device with a clean towel, the device must be off;
- Do not put too much pressure on the device or carry it on your shoulder;
- Carefully polish the floorboard (made of wood), observe all safety rules;
- Please use this device in accordance with all the rules stated in the manual, otherwise there may be various damages for which the user is responsible.


### Battery and charging device

- Do not use foreign batteries or power supplies;
- Do not disassemble or repair the battery and power supply;
- Do not leave the power supply near a heat source (for example, near a heater);
- Do not carry out any action with the power supply unit with wet hands, do not wipe it with a damp towel;
- Do not dispose of the battery with daily waste. Give it to the appropriate place of collection of batteries, batteries, etc. for their further special disposal;
- If the power supply cord is broken or damaged, immediately stop using it, contact the customer support department in a timely manner;
- For transportation of goods it is recommended to use the original packaging, make sure that the device is off;
- If the device is not used for a long time, charge the battery, turn off the mop, and place it in a cool dry place. To avoid excessive discharge of the battery, it is recommended to charge it every three months.

## Overview

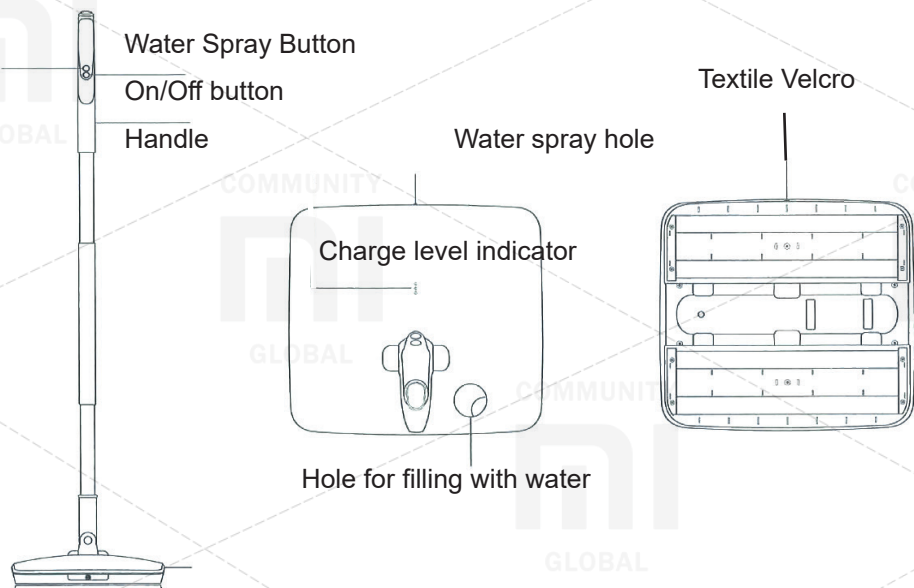


## Additional accessories

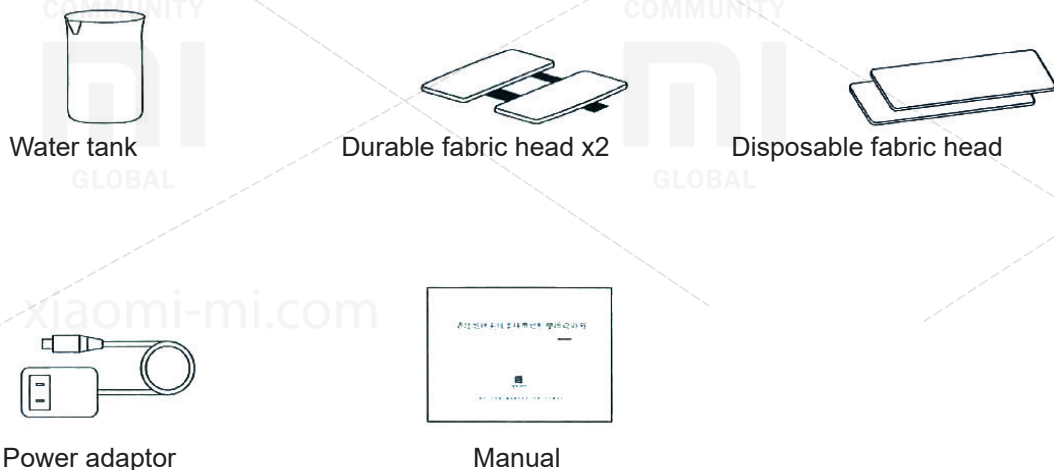


## Assembling


Click on the lock on the metal pipe, successively connect all parts of the mop together.

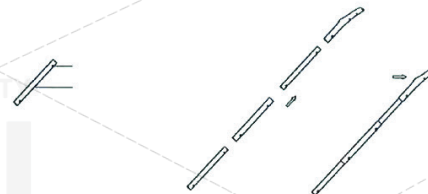


Lift the connecting lever to the upright position.

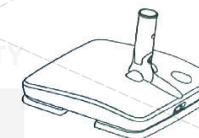

To raise the connecting lever from the folded horizontal to the vertical position, a small force must be applied.

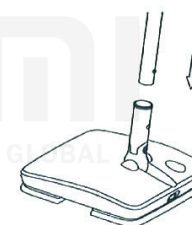

Place the main unit on the surface by pressing on the lock of the metal pipe, insert it into the mop connecting lever.

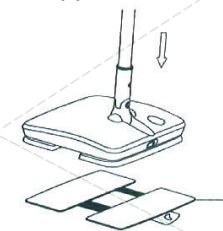


Put the fabric head on the floor, in accordance with the position of the head, put a mop on it. Then it will attach to the main unit with velcro.

## Using On/Off

By pressing the power button on the squeegee handle, you will hear a characteristic click, the charge level indicator will light up and the device will switch to the standby mode.

If the mop handle is in vertical position, the unit is turned off.

Caution: in the absence of any action for two minutes, the device goes into standby mode. In this case, 100% of the charge level flashes on the display. Move the handle to the upright position and pull back towards you to return to normal use.

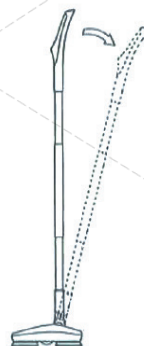


## Using

### Filling the tank with water


Open the lid of the water tank, holding it by hand, pour distilled water using a measuring glass. Pour water in the mop to the mark «MAX», close the water tank with a special lid.

Caution: The capacity of the water tank is 230 ml. Make sure that the water, you want to fill the tank, is clear and free of impurities, otherwise the device may break down.

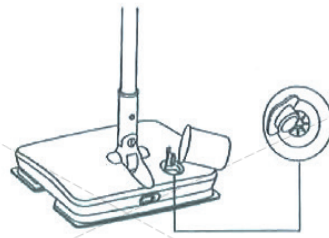

### Switching on/spraying


Remote control of mop operation and water spraying. In standby mode, press the power button, after which the mop will turn on and begin to perform reciprocating movements. Press the button again to turn off the device. Periodically press and hold the spray button to spray water.

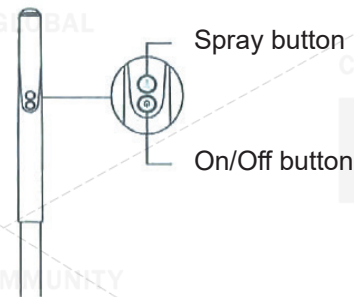

Release the spray button to stop spraying the water. Caution: when the battery level is low, the remote control function does not work. The maximum possible holding time of the injection button is 5 seconds. For normal response with remote control, the intervals between each push of a button should be longer than 1 s.

### Charge level indicator

Each of the three indicators of the charge level corresponds to a certain percentage of the charge level - 100%, 65% and 30%. When all three indicators blink, the charge level is low.

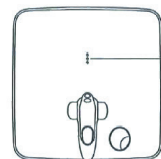

Charge level indicators

## Using

### Charge levels of the device


3 indicators - 100%;  
2 indicators - 65%;  
1 indicator - 30%;  
3 flashing lights - low charge.

### First charging

Remove the rubber plug from the port to recharge the device, plug the power adapter into the appropriate connector. Attention: use the original power adapter.

### Changing a head

Step by foot on a special mark on the fabric head, lift the device to separate it from the mop.

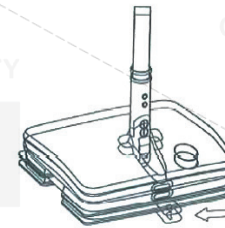

## Precautionary measures

### Handle

The mop can be automatically locked if the device is turned off and the handle is in a level vertical position.

### Textile velcro

After repeated use on textile velcro, there may be a lot of different foreign objects, dust, which reduces the effectiveness of its stickiness. Please use a soft brush to periodically clean a velcro from foreign objects.

### Fabric head

After each use, remove, wash and dry the fabric head or use disposable fabric head. Disposable fabric heads are made of environmentally friendly material, with repeated use their effectiveness is reduced.

### Water Tank

In the water tank it is necessary to add distilled water without impurities. After using the mop, you need to drain the rest of the water. If special essential oils are added, rinse the water tank several times after use.

## Main parameters

Name	Parameters
Battery volume	2000mAh
Rated voltage	DC 12V
Rated power	<35W
Output voltage of charging adapter	DC 12.6V 1A
Time of charging	3 h

## Troubleshooting

In the event of a malfunction, try to restore the normal operation of the device using this table.

The device does not turn on	Insufficient charge level, charge the device, and then start using it.
	Remove the battery of the remote-control handle.
There is no water in the reservoir	The device may be in charging mode (the remote-control function does not work when the device is charging), remove a plug from the wall outlet, press the power button.
	Check if there is water in a special tank.
The head is very heavy	Remove the battery of the remote-control handle.
	First you need to turn on this unit, and then you can moisten the surface.
	Check the charge level of the device.
Excessive amount of water on the surface	Excessive spraying of water, problems with the normal functioning of the textile head.
	In accordance with the degree of surface contamination, choose a speed of the mop. For a clean surface, you can choose a higher speed of the device.
Excessive amount of water on the surface	Excessive spraying of water.
	Use a dry fabric head.

## SWDK Electric Mop List of Faults

- Some of the functions, described in the instruction, do not work;
- The device does not turn on;
- Problems with the normal movement of the device, problems with water spraying;
- Problems with normal power supply.

## The presence of harmful and poisonous substances

	The presence of harmful and poisonous substances					
	(Pb)	(Hg)	(Cd)	(Cr (VI))	(PBB)	(PBDE)
Circuit board	×	○	○	○	○	○
Components	○	○	×	○	○	○
Body	○	○	○	○	○	○
Dry Battery	×	○	○	○	○	○
Battery	×	○	○	○	○	○

These tables are provided in accordance with SJ / T 11364.

O: Toxic and harmful substances in all components of this device are contained in an amount below the limit value in accordance with standard GB / T 26572-2011.

X: the presence of toxic and noxious substances in at least one of the components of this device in an amount exceeding the limit value, according to GB / T 26572-2011.

(All components marked «X» comply with the EU RoHS standard, or world technology developers have not yet found a way to notice the harmful substance that is contained in the details).

(This table contains our company's data on the presence of harmful substances in our products, but not all devices have all of the above components).

It is environmentally safe to use the device with a dry battery for 3 years.

It is environmentally safe to use the device with a battery for 5 years.

## SWDK Electric Mop

Manufacturer: Ningbo Sawadeka Electric Appliance Co., Ltd;

Model: D260 (\* There are no notifications for updated models);

Standard: DB4706.1-2015 GB4706.57-2008 Q / SWDK 01-2017;

Address: Yuyao City, Zhejiang Province, Yangming Street, Fangqiao Industrial Park, 129 Yucai East Road;

Website: www.swdk.com.cn;

Telephone technical support: 0571-879652 10;

e-mail: sale@swdk.com.cn;

Fax: 0571-8797902; 0;

Sales center: Zhejiang Province, Hangzhou City, Xihu District, Sandun Sujia Road, Huacai International Building 2, 8th Floor;

National free phone service: 400-665-0037.

## Warranty

Warranty service is carried out in accordance with the law on «Consumer Rights of the People's Republic of China» and «Law on the quality of China's products.»

Warranty service includes:

1. Within 7 days from the date of purchase, in case of a problem from the «Fault List», the service center determines the cause of the problem, after which you can choose a free replacement of the goods, return or repair.
2. Within 8-15 days from the date of purchase, in the event of a problem from the «Fault List», the service center determines the problem, after which you choose a free replacement or repair.
3. Within 12 months from the date of purchase, in the event of a problem from the «Fault List», the service center determines the problem, after which you are provided with free repair.

4. In case of using the device in public places (shops, schools, etc.), the warranty for the main device is provided for 3 months, and for basic components - for six months.

Recommendation: for the safe transport of the device, special packaging must be used. It is recommended to keep the packaging of the goods within 30 days.

## Conditions, that are not subject to warranty

1. Maintenance of the device in unauthorized service centers, improper use, fall, negligence, abuse, liquid ingress, accident, damage to the label and labeling of the device;
2. The warranty has expired;
3. Damage caused by force majeure;
4. Breakdowns that do not correspond to the «List of faults» of the service center;
5. Breakdown of the device from the «List of malfunctions», which have arisen in connection with the human factor and which prevent its normal operation;
6. The time of the purchase is not specified.

Required documents, identifying the time of the purchase (including a sales receipt, invoice, purchase order screenshot, etc.). If the time of purchase can not be determined, the date is 60 days after the release of the product (according to the quality certificate) is considered to be the beginning of the warranty.

Type	Warranty	Warranty period
Main device	Main unit (including built-in battery)	1 year
Accessories	Адаптер живлення	1 year
Supplies	Fabric head disposable fabric head	/

Note: no warranty is provided for consumables.